

QUICK GUIDE


BIG KAISER



DOWNLOAD THE
BIG KAISER
APP


↓

This panel shows a smartphone displaying the Big Kaiser app interface, a QR code with the BK logo, and a large white arrow pointing downwards.

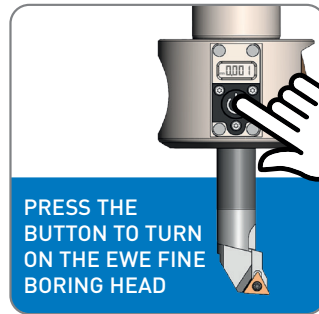

PRESS THE
BUTTON TO TURN
ON THE EWE FINE
BORING HEAD

This panel shows a hand pressing a power button on the EWE fine boring head.

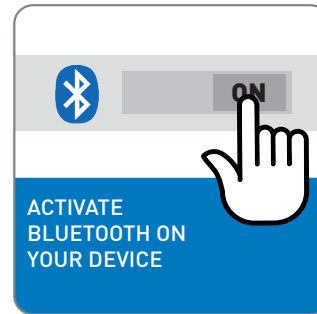

ACTIVATE
BLUETOOTH ON
YOUR DEVICE

ON

This panel shows a hand turning on the Bluetooth switch on a device.



CONNECT
THE TOOL
TO YOUR
DEVICE

EWE 2-152


This panel shows the EWE 2-152 tool connected to a smartphone via Bluetooth.



TYPE IN
YOUR
VALUES

Tool Data	_____
Target	_____
Measured	_____
ISO Tolerance	_____

This panel shows a hand entering values into a digital display on the boring head.

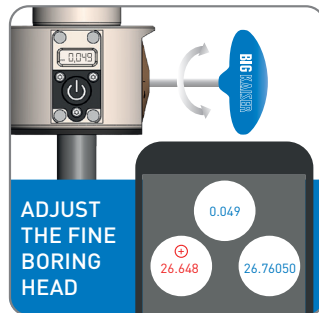


ADJUST
THE FINE
BORING
HEAD

0.049

26.648 26.76050

This panel shows the fine boring head being adjusted, with a digital display showing 0.049 and two other values, 26.648 and 26.76050.

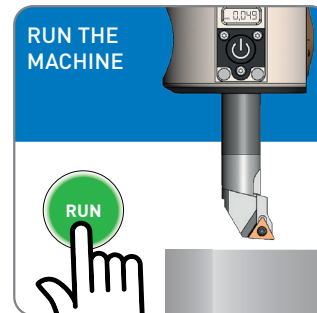

RUN THE
MACHINE

RUN

This panel shows a hand pressing a green 'RUN' button on the boring head.



CHECK YOUR TOOL
HISTORY ON YOUR DEVICE

This panel shows a hand checking the tool history on a smartphone.